


PPC1010T - keyboard layout changing

- 1/ Start
- 2/ Run
- 3/ Regedit
- 4/ HKEY_CURRENT_USER
 KeyboardLayout
 Preload

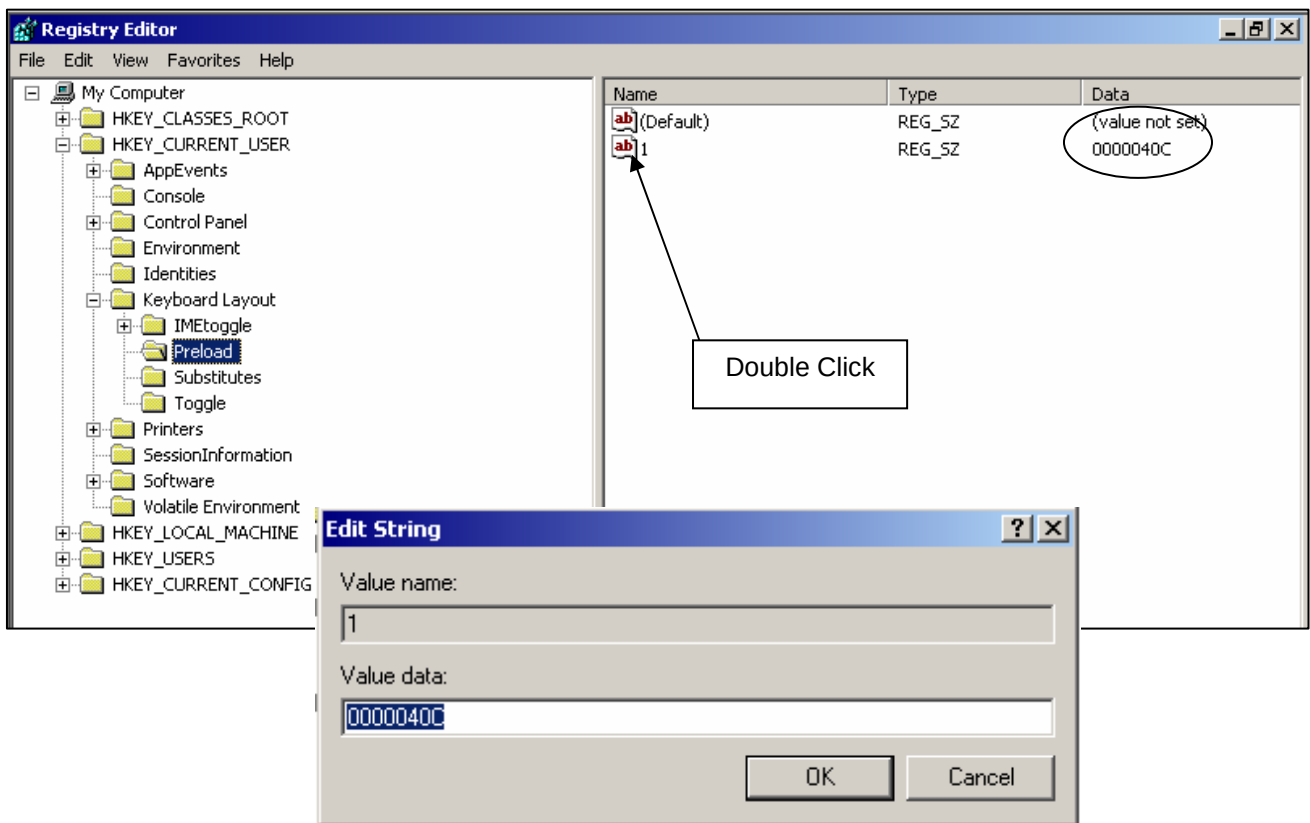

5/ Double click

6/ Value Data :

0000040C = French Keyboard (Clavier Français AZERTY).

00000409 = US Keyboard (Clavier américain QWERTY).

7/ Click OK and quit Regedit

8/ reboot the PPC1010T